

Service Manual: FRONT DISC BRAKE

DIAGNOSIS AND TESTING > FRONT DISC BRAKE

REFER to: Brake System .

REMOVAL AND INSTALLATION > BRAKE CALIPER - VEHICLES WITH: 2-PISTON BRAKE CALIPER > REMOVAL



NOTE: Make sure that all openings are sealed.



NOTE: If the fluid is spilled on the paintwork, the affected area must be immediately washed down with cold water.



NOTE: Removal steps in this procedure may contain installation details.

1.


Remove the wheel and tire. Refer to: Wheel and Tire .

2.

Remove the brake caliper flow bolt and disconnect the brake hose. Discard the washers.

Torque

: 30 lb.ft (40 Nm)

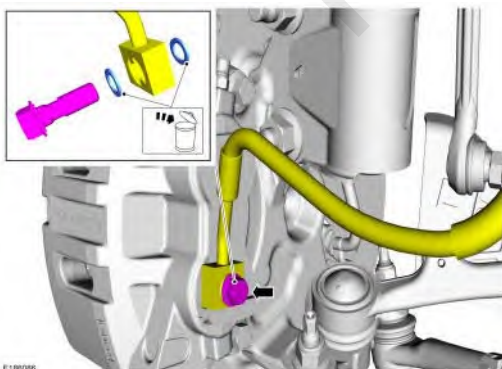

3.

Remove the 2 guide pin bolts and the brake caliper.

Torque