


: 24 lb.ft (32 Nm)

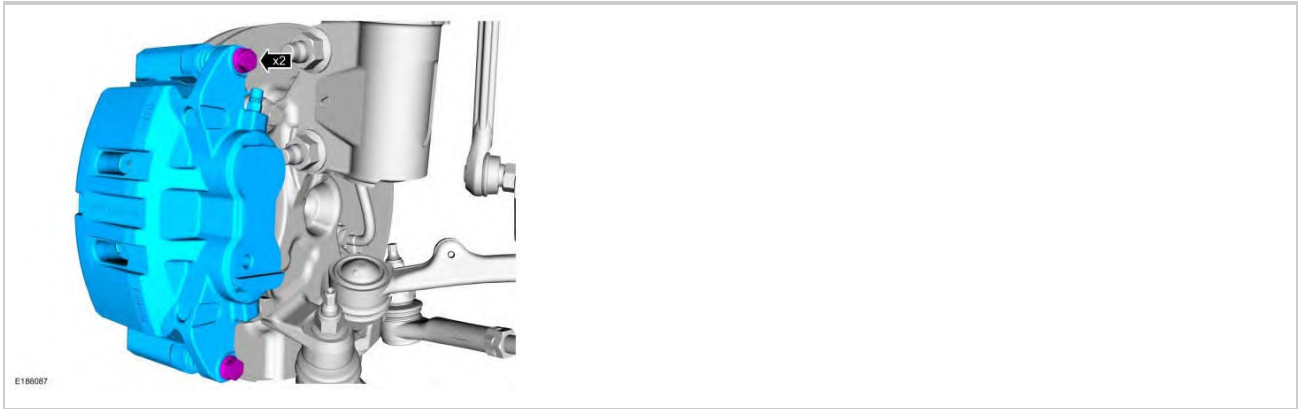

REMOVAL AND INSTALLATION > BRAKE CALIPER - VEHICLES WITH: 2-PISTON BRAKE CALIPER > INSTALLATION

1.

To install, reverse the removal procedure.

2.

Bleed the brake system. Refer to: Brake System Pressure Bleeding .

REMOVAL AND INSTALLATION > BRAKE CALIPER - VEHICLES WITH: 4-PISTON BRAKE CALIPER > REMOVAL



NOTE: Make sure that all openings are sealed.



NOTE: If the fluid is spilled on the paintwork, the affected area must be immediately washed down with cold water.



NOTE: Removal steps in this procedure may contain installation details.

1.

Remove the brake pads. Refer to: Brake Pads - Vehicles With: 4-Piston Brake Caliper .

2.

Remove the brake caliper flow bolt and disconnect the brake hose. Discard the washers.

Torque