


: 30 lb.ft (40 Nm)

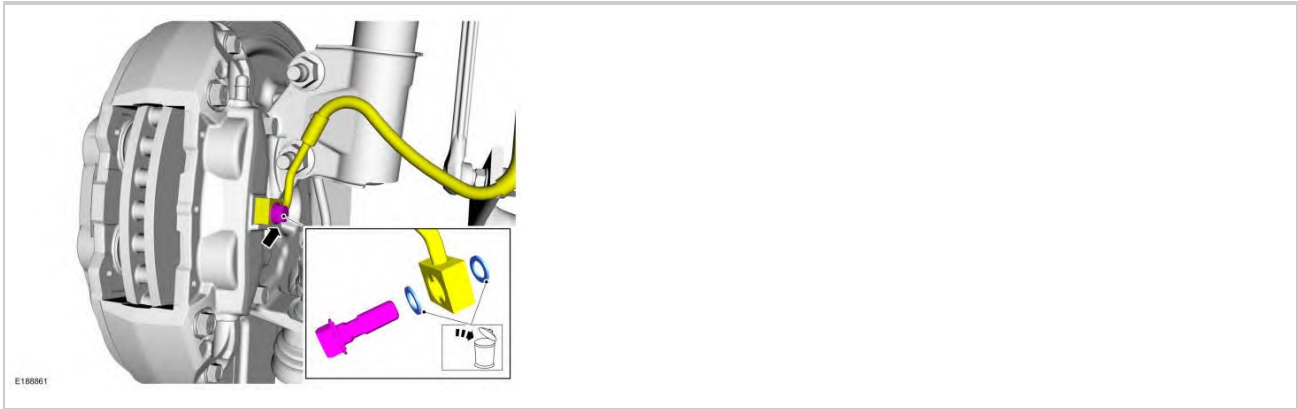


3.

Remove the 2 bolts and the brake caliper. Discard the bolts.

Torque

: 85 lb.ft (115 Nm)

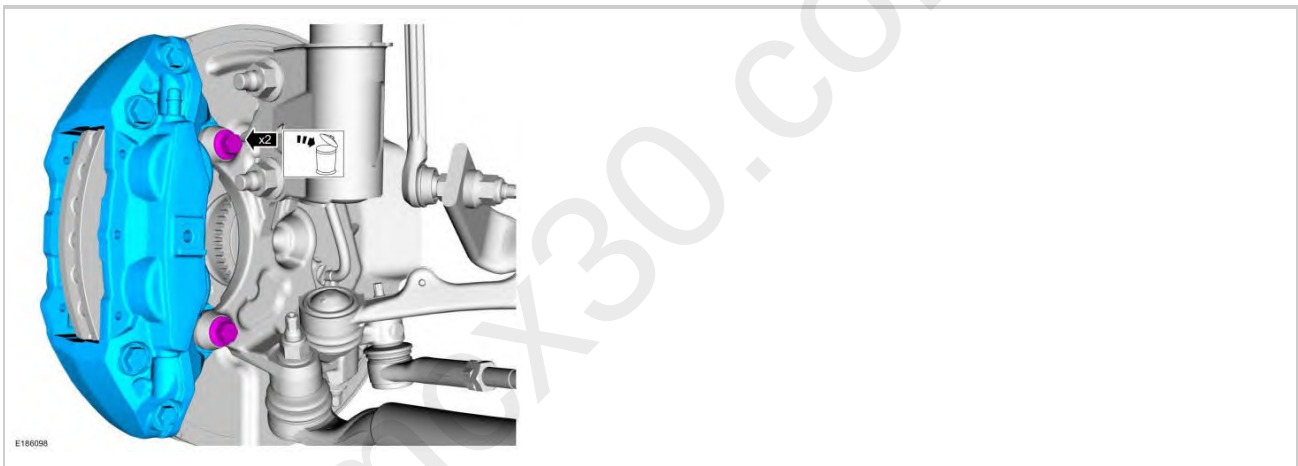

REMOVAL AND INSTALLATION > BRAKE CALIPER - VEHICLES WITH: 4-PISTON BRAKE CALIPER > INSTALLATION

1.

To install, reverse the removal procedure.

2.

Bleed the brake system. Refer to: Brake System Pressure Bleeding .

REMOVAL AND INSTALLATION > BRAKE CALIPER - VEHICLES WITH: 6-PISTON BRAKE CALIPER > REMOVAL