



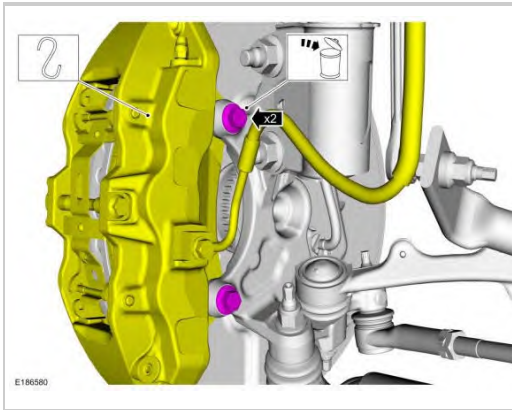

All brake calipers

5.

Remove the brake disc.

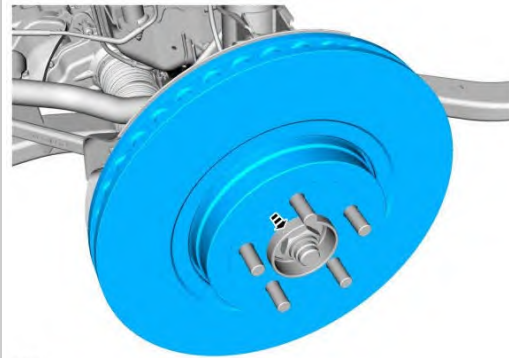

REMOVAL AND INSTALLATION > BRAKE DISC > INSTALLATION

1.

To install, reverse the removal procedure.

2.

Clean the brake disc mating surfaces using a wire brush and the specified material.

Material

: Metal Brake Parts Cleaner (U.S.) / PM-4-A, PM-4-B (U.S.)

3.

Apply the brake pedal several times to verify correct brake system operation.

REMOVAL AND INSTALLATION > BRAKE DISC SHIELD > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

All brake calipers

1.

Remove the brake disc. Refer to: Brake Disc .


2-piston brake caliper

2.

Remove the 3 bolts and the brake disc shield.

Torque

: 177 lb.in (20 Nm)

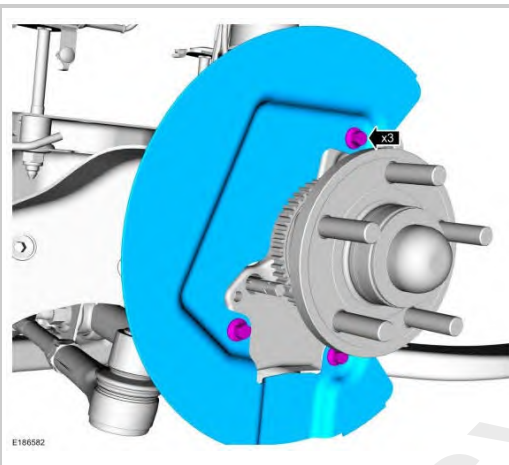

4-piston brake caliper

3.

Remove the 3 bolts and the brake disc shield.

Torque

: 177 lb.in (20 Nm)

