

CALIPER > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.

Remove wheel and tire. Refer to: Wheel and Tire .




NOTE: Do not allow the brake caliper to hang from the brake hose or damage to the brake hose may occur.

2.

Remove the 2 brake caliper guide pin bolts and position the brake caliper aside.

Torque

: 24 lb.ft (32 Nm)

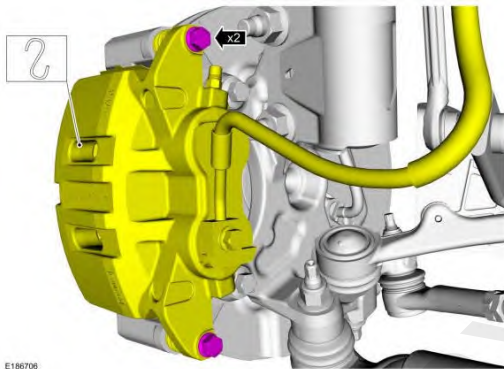

NOTE: Note the position of the components before removal.

3.

Remove the brake pads.

