




REMOVAL AND INSTALLATION > ACCESSORY DRIVE BELT TENSIONER > REMOVAL

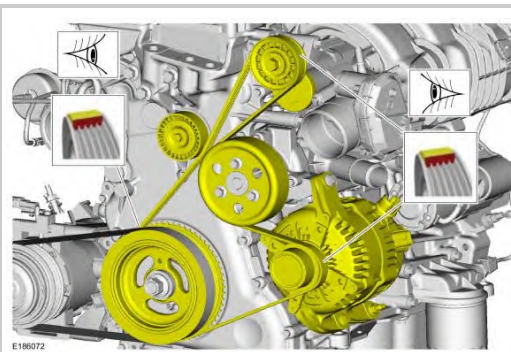

NOTE: Removal steps in this procedure may contain installation details.


1.

Remove the bolts, nut and the engine appearance cover.

Torque:

1.: 53 lb.in (6 Nm)

2.: 89 lb.in (10 Nm)

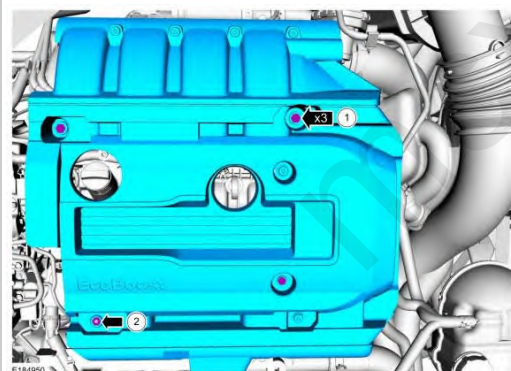

2.

Remove the air cleaner outlet pipe. Refer to: AIR CLEANER OUTLET PIPE - 2.3L EcoBoost (231kW/314PS).

3.

Rotate the accessory drive belt tensioner counter clockwise and position aside the accessory drive belt.