


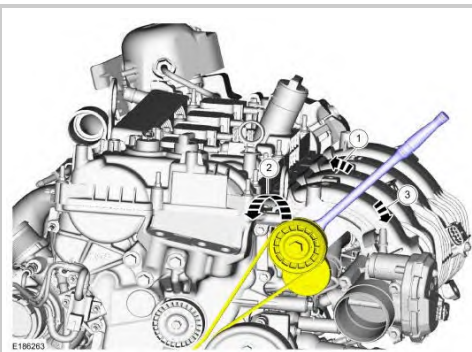


4.

Remove the bolts and the accessory drive belt tensioner.

Torque

: 18 lb.ft (25 Nm)

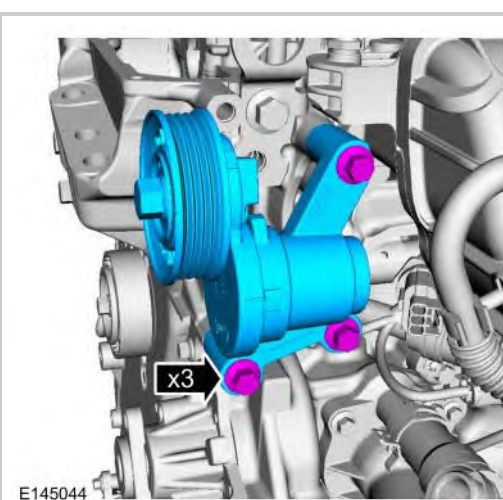

REMOVAL AND INSTALLATION > ACCESSORY DRIVE BELT TENSIONER > INSTALLATION

1.

To install, reverse the removal procedure.

2.

After installation, make sure the accessory drive belt is correctly seated on all pulleys.