


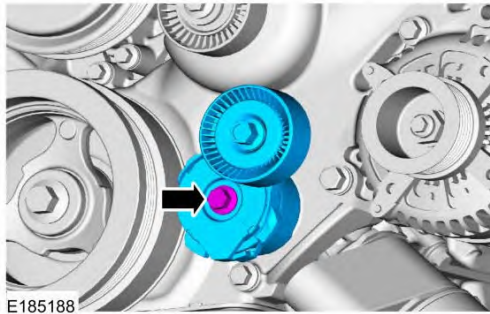


REMOVAL AND INSTALLATION > ACCESSORY DRIVE BELT TENSIONER > INSTALLATION

1.

To install, reverse the removal procedure.

2.

After installation, make sure the accessory drive belt is correctly seated on all pulleys.

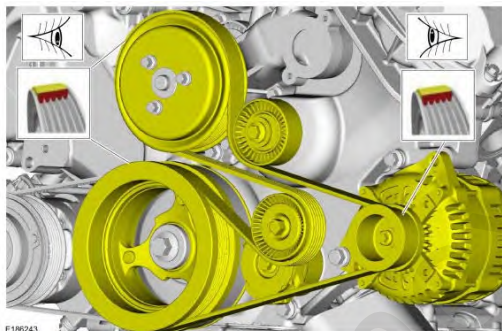

REMOVAL AND INSTALLATION > AIR CONDITIONING (A/C) COMPRESSOR BELT

Special Tool(s) / General Equipment

Cable Ties

REMOVAL AND INSTALLATION > AIR CONDITIONING (A/C) COMPRESSOR BELT > REMOVAL



NOTE: Under no circumstances should the A/C compressor belt, accessory drive belt, tensioner or pulleys be lubricated as potential damage to the belt material and tensioner damping mechanism will occur. Do not apply any fluids or belt dressing to the A/C