


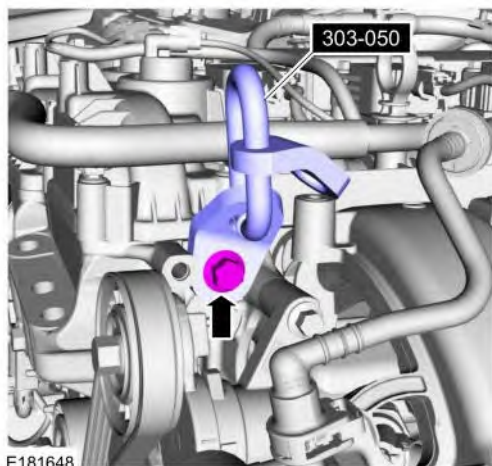


17.

Install the engine appearance cover and the nuts.

Torque

: 80 lb.in (9 Nm)

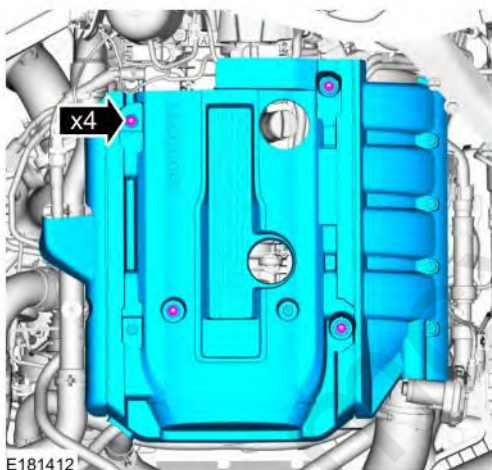

REMOVAL AND INSTALLATION > ENGINE MOUNT RH

Special Tool(s) / General Equipment



303-050 (T70P-6000) Lifting Bracket, Engine