


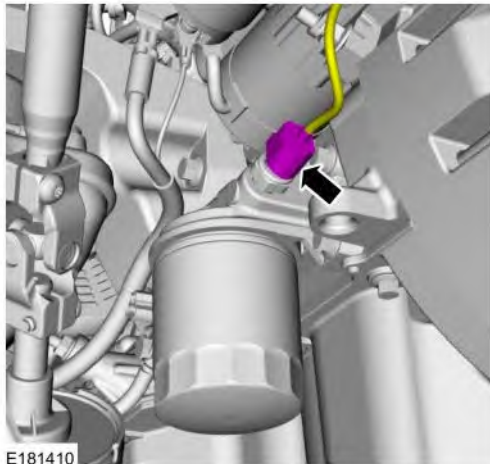


3.

Remove and discard the oil pressure switch.

Torque

: 133 lb.in (15 Nm)

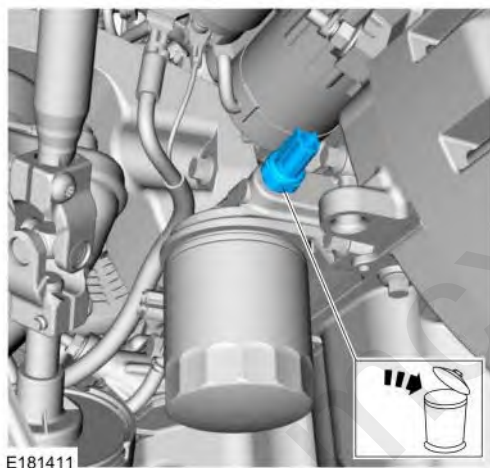

REMOVAL AND INSTALLATION > OIL PRESSURE SWITCH > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > OIL PUMP

Special Tool(s) / General Equipment