

orientation and reassembly.


129.

Remove the crankshaft main bearings.



130.

Remove the bolts and the engine piston oil cooler valves.

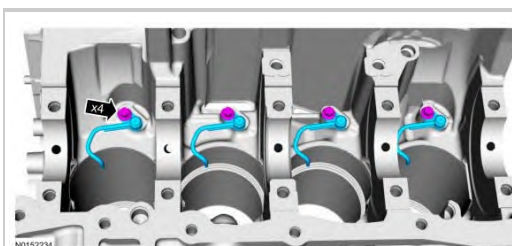

DISASSEMBLY AND ASSEMBLY OF SUBASSEMBLIES > CYLINDER HEAD

Special Tool(s) / General Equipment

E223048	303-1249 Valve Spring Compressor TKIT-2006UF-FLM TKIT-2006UF-ROW
E222987	303-1567 Sizer, Teflon Seal TKIT-2010C-FLM
E134677	303-300 (T87C-6565-A) Set, Valve Spring Compressor T88C-1000-ST TKIT-1988-FESTIVA TKIT-1988-TRACER TKIT-2009TC-F

 E134678	303-350 (T89P-6565-A) Compressor, Valve Spring TKIT-1989-F TKIT-1989-FLM TKIT-1989-FM TKIT-1990-LMH
 E223049	303-468 (T94P-6510-AH) Remover, Valve Stem Oil Seal TKIT-1994-FH/FMH/FLMH TKIT-1994-LMH/MH2
 E223050	303-470 (T94P-6510-CH) Installer, Valve Stem Oil Seal TKIT-1994-FH/FMH/FLMH TKIT-1994-LMH/MH2 TKIT-2009TC-F
 E134679	303-472 (T94P-6565-AH) Adapter, Valve Spring Compressor TKIT-1994-FH/FMH/FLMH TKIT-1994-LMH/MH2
 E222982	307-005 (T59L-100-B) Slide Hammer
 E223046	310-205 Fuel Injector Brush
 E168032	310-206 Remover, Fuel Injector TKIT-2009A-FLM