



310-207 Installer, Fuel Injector Seal Assembly

TKIT-2009A-FLM

Knife

Long Nose Pliers

Materials

Name	Specification
Motorcraft® Multi-Purpose Grease SprayXL-5-A	ESB-M1C93-B
Motorcraft® SAE 5W-30 Premium Synthetic Blend Motor Oil (U.S.) XO-5W30-QSP (U.S.)	WSS-M2C946-A

DISASSEMBLY AND ASSEMBLY OF SUBASSEMBLIES > CYLINDER HEAD > DISASSEMBLY



NOTE: During engine repair procedures, cleanliness is extremely important. Any foreign material, including any material created while cleaning gasket surfaces, that enters the oil passages, coolant passages or the oil pan can cause engine failure.



NOTE: Aluminum surfaces are soft and can be scratched easily. Never place the cylinder head gasket surface, unprotected, on a bench surface.



NOTE: If the components are to be reinstalled, mark the location of the components removed, they must be installed in the same location.

1.

Remove the bolts and coolant outlet.