

10.

Install the flexplate or flywheel. Refer to: Flexplate . Refer to: Flywheel .

REMOVAL AND INSTALLATION > CYLINDER HEAD LH

Special Tool(s) / General Equipment

Oil Drain Equipment

Materials

Name	Specification
Motorcraft® SAE 5W-20 Premium Synthetic Blend Motor Oil (U.S.) XO-5W20-QSP (U.S.)	WSS-M2C945-A

REMOVAL AND INSTALLATION > CYLINDER HEAD LH > REMOVAL

 **NOTE:** During engine repair procedures, cleanliness is extremely important. Any foreign material, including any material created while cleaning gasket surfaces that enters the oil passages, coolant passages or the oil pan, can cause engine failure.

 **NOTE:** If the cylinder head is replaced, a new secondary timing chain tensioner will need to be installed. Refer to Variable Camshaft Timing (VCT) Unit .

1.

With the vehicle in NEUTRAL, position it on a hoist. Refer to: Jacking and Lifting - Overview .

2.

Release the fuel system pressure. Refer to: FUEL SYSTEM PRESSURE RELEASE .

3.

Disconnect the battery ground. Refer to: Battery Disconnect and Connect .

4.

Disconnect the LH HO2S and catalyst monitor sensor electrical connectors.