

REMOVAL AND INSTALLATION > ENGINE MOUNT LH

Special Tool(s) / General Equipment

	303-1245 Engine Lift Eye TKIT-2006UF-FLM TKIT-2006UF-ROW
	303-F072 Support Bar, Engine

REMOVAL AND INSTALLATION > ENGINE MOUNT LH > REMOVAL

Convertible/Coupe

1.

With the vehicle in NEUTRAL, position it on a hoist. Refer to: Jacking and Lifting - Overview .
2.

Remove the cowl panel grille. Refer to: Cowl Panel Grille .

Convertible

3.

Disconnect the negative battery cable. Refer to: Battery Disconnect and Connect .
4.

Detach the battery cable retainer.