



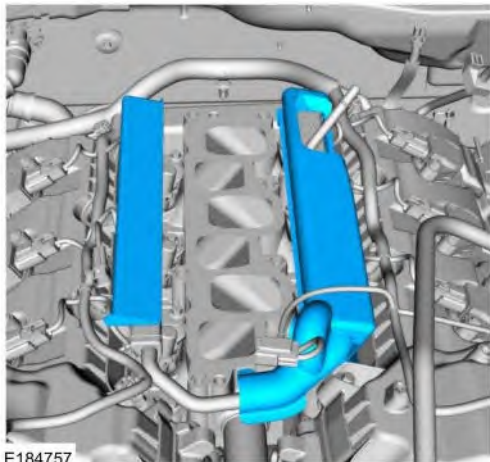

7.

Connect the fuel tube quick release coupling. Refer to: QUICK RELEASE COUPLING .

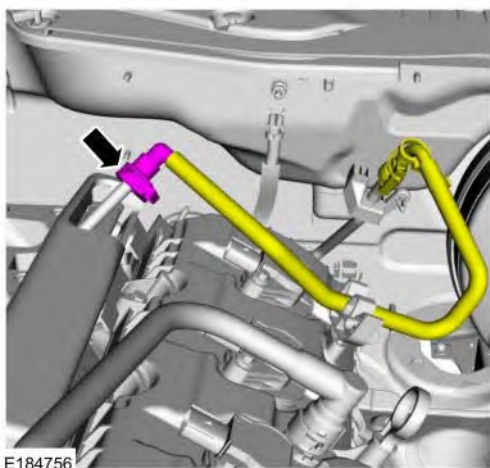

8.

Install the upper intake manifold. Refer to: Upper Intake Manifold .

9.

Connect the battery ground cable. Refer to: Battery Disconnect and Connect .

10.

Fill the cooling system. Refer to: COOLING SYSTEM DRAINING AND VACUUM FILLING .

REMOVAL AND INSTALLATION > OIL PAN

Special Tool(s) / General Equipment