

REMOVAL AND INSTALLATION > BRAKE DISC SHIELD - VEHICLES WITH: SVT PERFORMANCE PACKAGE > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.


Remove the brake disc. Refer to: Brake Disc - Vehicles With: SVT Performance Package .

2.

Remove the bolts and the brake disc shield.

Torque

: 106 lb.in (12 Nm)

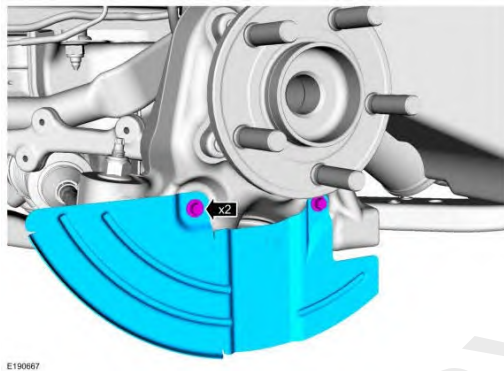

REMOVAL AND INSTALLATION > BRAKE DISC SHIELD - VEHICLES WITH: SVT PERFORMANCE PACKAGE > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > BRAKE PADS - VEHICLES WITH: SVT PERFORMANCE PACKAGE > REMOVAL



NOTE: Do not pry in the caliper sight hole to retract the pistons as this can damage the pistons and boots.