


14.

Remove the RH secondary timing chain tensioner shoe.

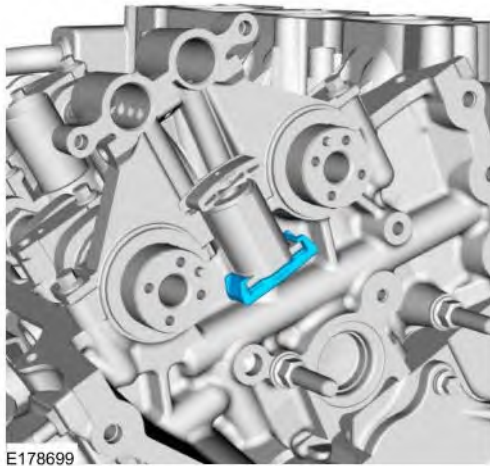

15.

Remove the RH secondary timing chain tensioner by pushing up from the bottom.



REMOVAL AND INSTALLATION > VARIABLE CAMSHAFT TIMING (VCT) UNIT > INSTALLATION

Installation of the RH secondary timing chain tensioner



NOTE: The following 10 steps are only for the installation of the RH secondary timing chain tensioners. Do not reuse the secondary timing chain tensioners if removed, or damage to the engine may occur.



NOTE: Do not remove the secondary timing chain tensioner shipping clip, until