



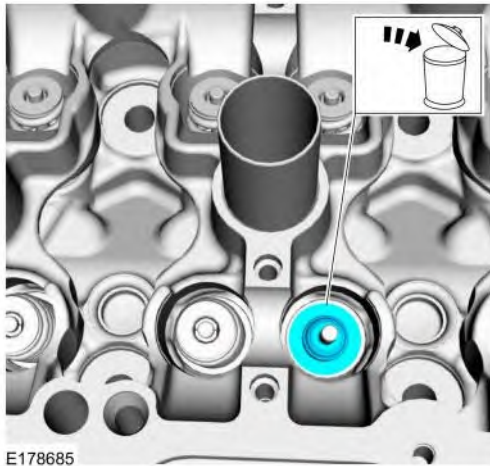

15.

Remove the valve.

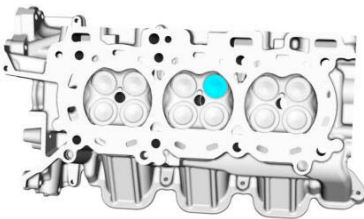

16.


Repeat the previous 3 steps for each valve.

DISASSEMBLY AND ASSEMBLY OF SUBASSEMBLIES > CYLINDER HEAD > ASSEMBLY

All cylinder heads

1.

Install the valve.

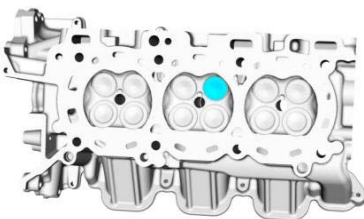

2.

Lubricate with clean engine oil and using the special tool, install the valve stem seal.