



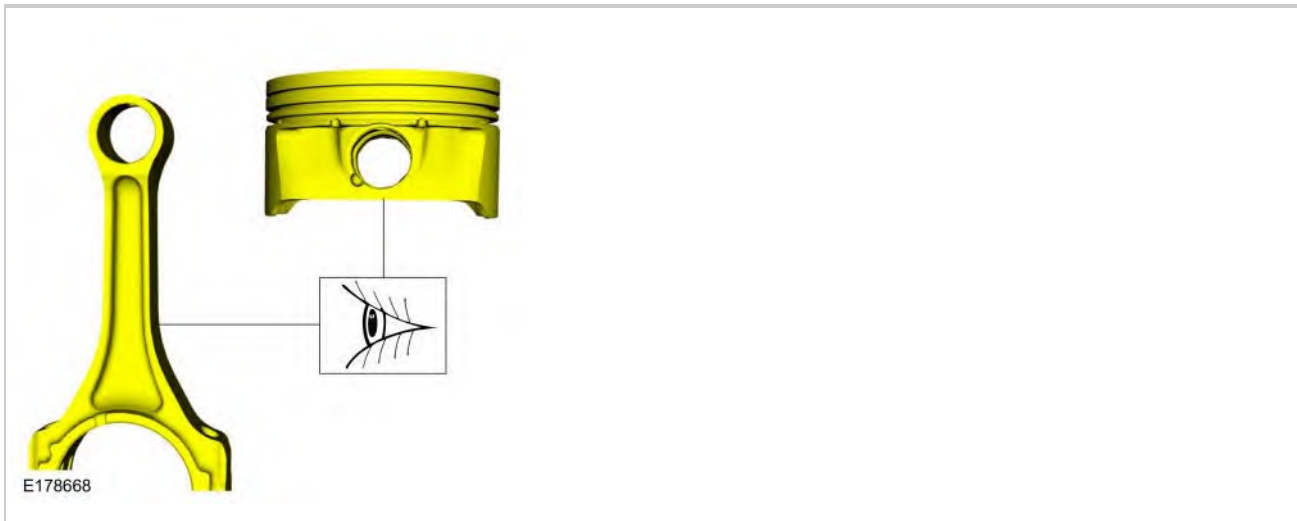

DISASSEMBLY AND ASSEMBLY OF SUBASSEMBLIES > PISTON > ASSEMBLY

1.

If the piston and/or connecting rod are being installed new, the piston rod orientation marks and the arrow on the top of the dome of the piston should be facing toward the front of the engine block.

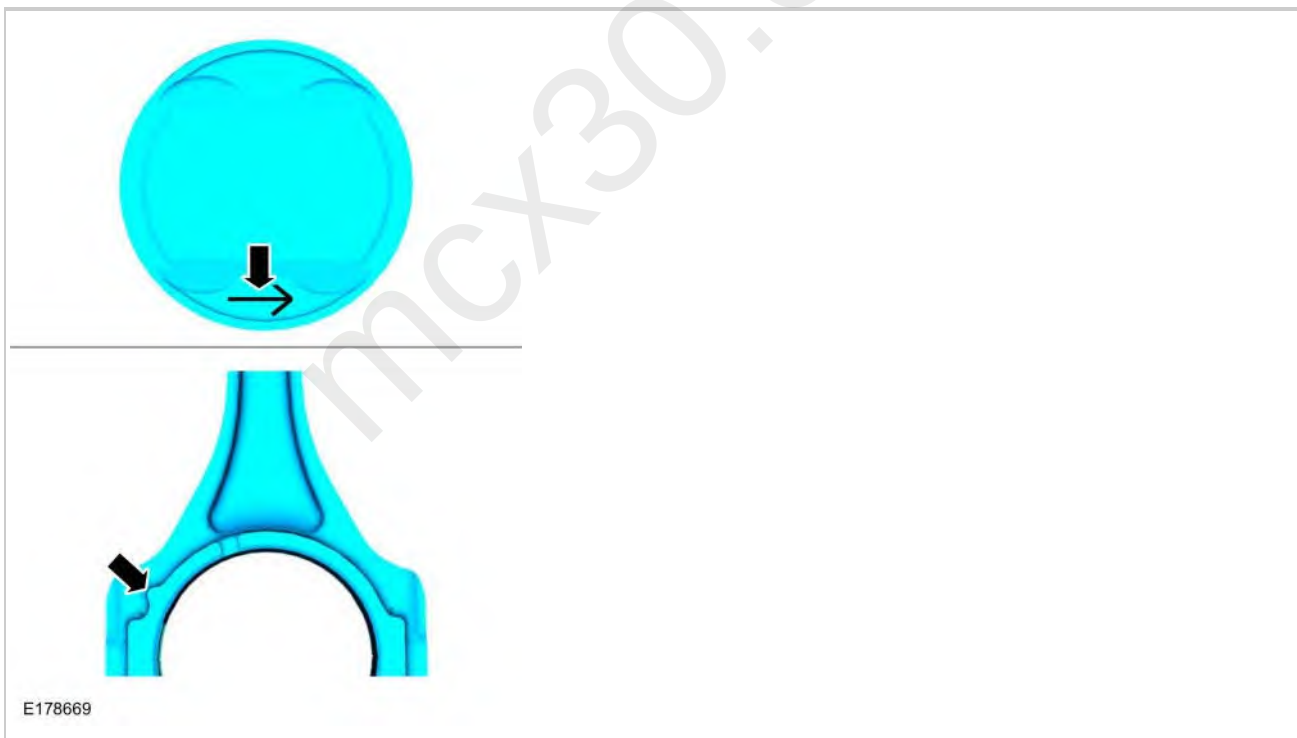

2.

Install the piston to the connecting rod.



E178670

3.

Lubricate with clean engine oil and install the piston pin.

Material

: Motorcraft® SAE 5W-20 Premium Synthetic Blend Motor Oil (U.S.) / XO-5W20-QSP (U.S.)
(WSS-M2C945-A)



E178671



NOTE: The piston pin retaining clip gap orientation must be toward the top or dome of piston.

4.

Install the piston pin retainers.



E178672

5.

Lubricate with clean engine oil and install the piston rings.

Material

: Motorcraft® SAE 5W-20 Premium Synthetic Blend Motor Oil (U.S.) / XO-5W20-QSP (U.S.) (WSS-M2C945-A)



E178679



NOTE: The arrow on the top of the piston indicates the front of the engine.



NOTE: The piston compression upper and lower ring should be installed with the "O" mark on the ring face pointing up toward the top of the piston.

6.

1.

Center line of the piston parallel to the wrist pin bore.