


Use Special Service Tool: 205-153 (T80T-4000-W) Handle, 303-1250 Seal Installer, Rear Main.

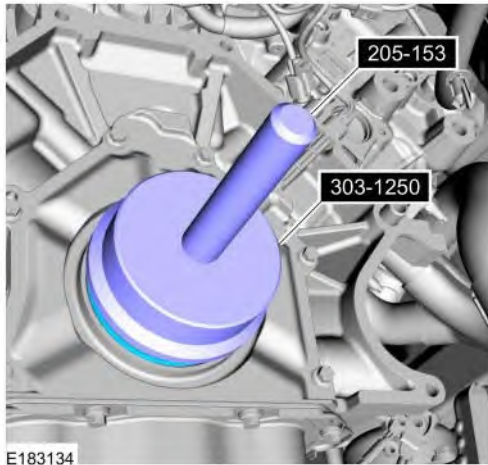

 **NOTE:** Automatic transmission spacer plate shown in illustration, manual transmission similar.

4.

Install the crankshaft sensor ring and the engine-to-transmission spacer plate.



5.

Install the flexplate or flywheel. Refer to: Flexplate . Refer to: Flywheel .

REMOVAL AND INSTALLATION > CRANKSHAFT REAR SEAL WITH RETAINER PLATE

Special Tool(s) / General Equipment