


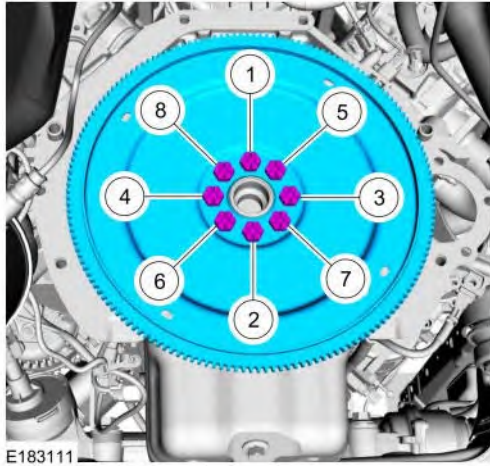

2.

Install the transmission. Refer to: Transmission - 5.0L 32V Ti-VCT .

3.

After completing the repairs, perform the Misfire Monitor Neutral Profile Correction procedure using a diagnostic scan tool.

REMOVAL AND INSTALLATION > FLYWHEEL > REMOVAL

1.

Remove the clutch disc. Refer to: Clutch Disc and Pressure Plate - 5.0L 32V Ti-VCT .



NOTE: The flywheel bolts are torque-to-yield design and are not reusable.

2.

Remove and discard the bolts.

Remove the flywheel.