


Fill the engine with clean engine oil. Refer to: Specifications .

Material

: Engine Oil - 5W20 (WSS-M2C948-B)

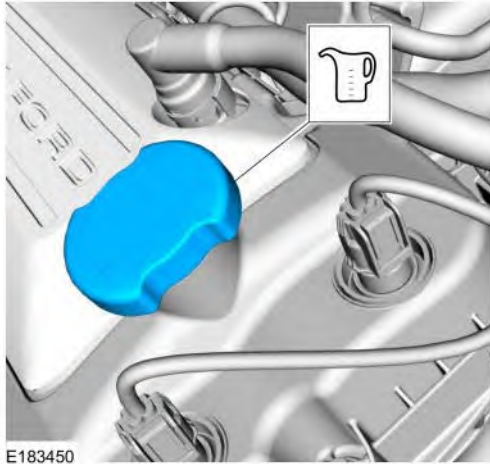

40.

Connect the battery ground and positive cables. Refer to: Battery Disconnect and Connect .

## REMOVAL AND INSTALLATION > OIL PRESSURE SWITCH

### Materials

| Name                            | Specification |
|---------------------------------|---------------|
| Thread Sealant with PTFETA-24-B | WSK-M2G350-A2 |

## REMOVAL AND INSTALLATION > OIL PRESSURE SWITCH > REMOVAL



*NOTE: Removal steps in this procedure may contain installation details.*

1.

With the vehicle in NEUTRAL, position it on a hoist. Refer to: Jacking and Lifting - Overview .

2.

Disconnect the EOP switch electrical connector.