

Disconnect the brake tube fitting.

Torque


: 159 lb.in (18 Nm)

2.

Remove the bolt and the front brake flexible hose.

Torque

: 18 lb.ft (25 Nm)

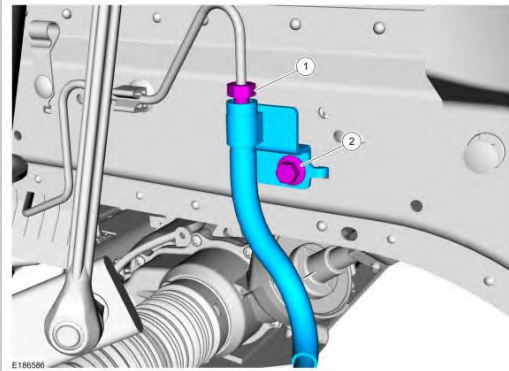

REMOVAL AND INSTALLATION > FRONT BRAKE FLEXIBLE HOSE - VEHICLES WITH: SVT PERFORMANCE PACKAGE > INSTALLATION

1.

To install, reverse the removal procedure.

2.

Bleed the brake system. Refer to: Brake System Pressure Bleeding .