



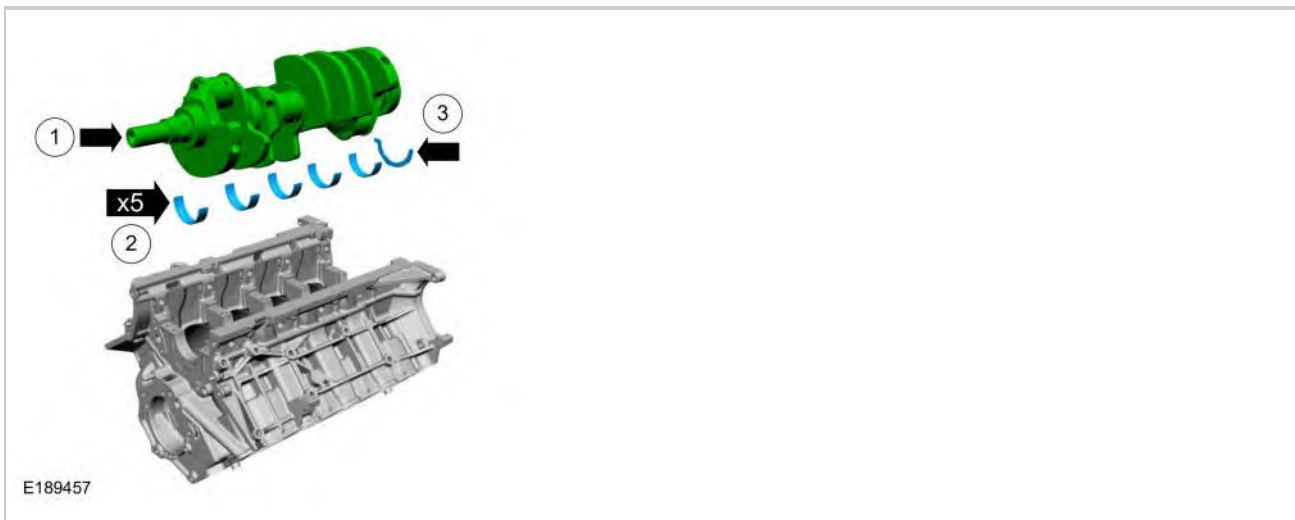


108.

Remove the bolts and the piston cooling jets from the cylinder block.

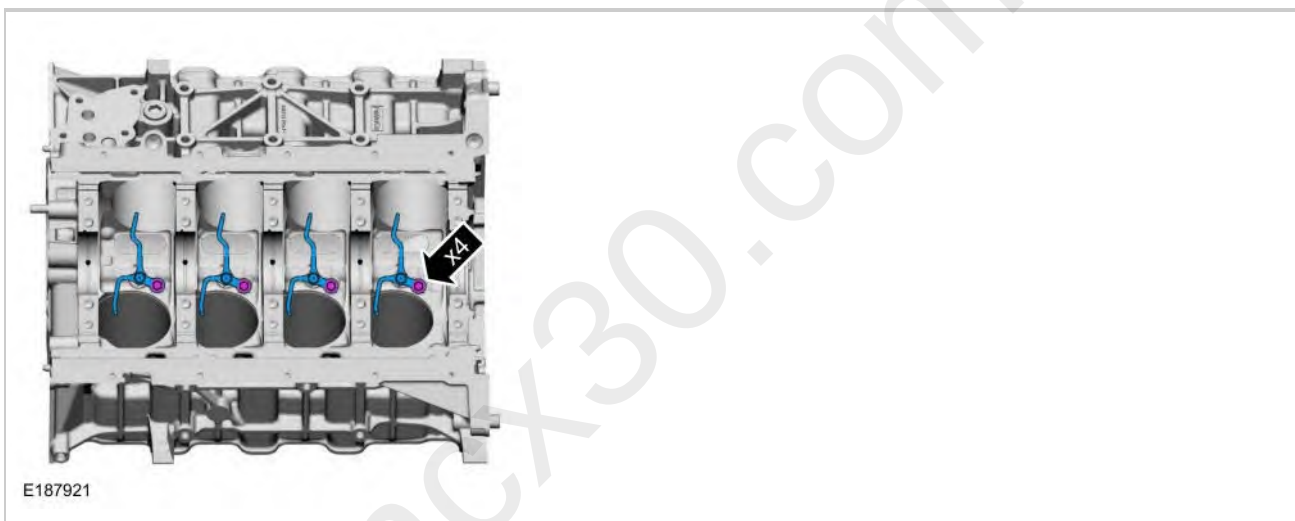

DISASSEMBLY AND ASSEMBLY OF SUBASSEMBLIES > CYLINDER HEAD

Special Tool(s) / General Equipment

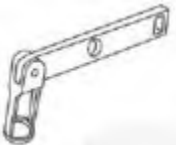 E223048	303-1249 Valve Spring Compressor TKIT-2006UF-FLM TKIT-2006UF-ROW
	303-1418 Compressor, Valve Spring TKIT-2008ET-FLM