



Remove and discard the valve stem seal.

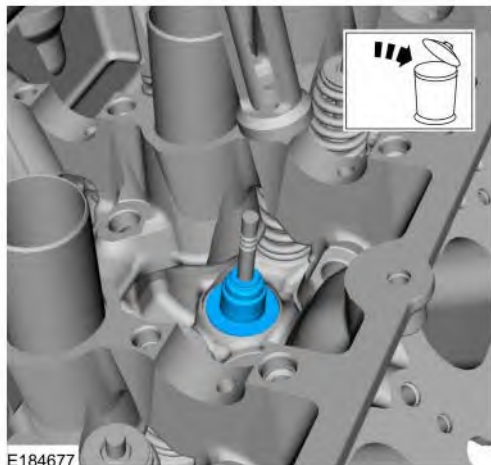

9.

Remove the valve from the cylinder head.

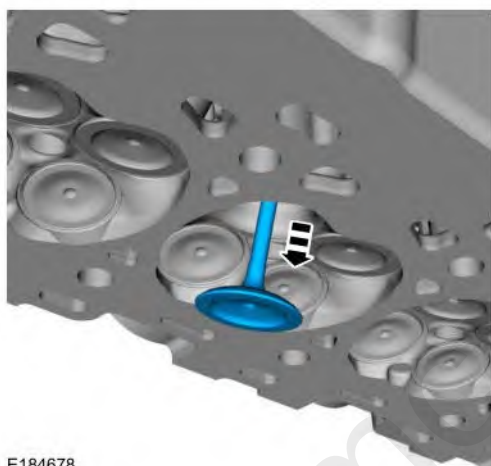

10.

Repeat the previous steps for each of the remaining valves.

DISASSEMBLY AND ASSEMBLY OF SUBASSEMBLIES > CYLINDER HEAD > ASSEMBLY

All cylinder heads



NOTE: Lubricate the new valve stem seal and valve guide bore with clean engine oil.

1.