




NOTE: Make sure that all openings are sealed.

6.
Disconnect the 2 brake tube fittings.

Torque


: 20 lb.ft (27.5 Nm)

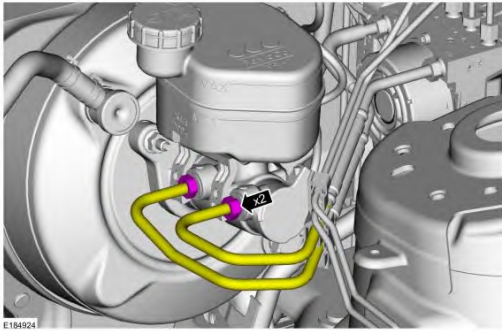

7.
Remove the 2 nuts and the brake master cylinder. Discard the nuts.

Torque

: 17 lb.ft (23 Nm)

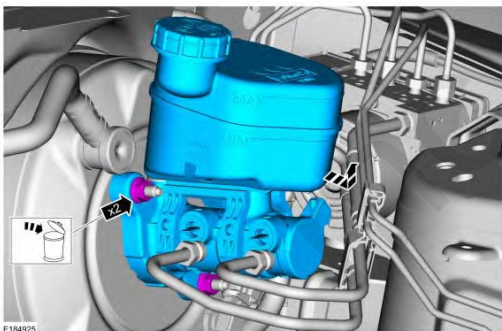

REMOVAL AND INSTALLATION > BRAKE MASTER CYLINDER > INSTALLATION

1.
To install, reverse the removal procedure.

- 2.

If installing a new brake master cylinder, bleed the master cylinder. Refer to: Component Bleeding .