


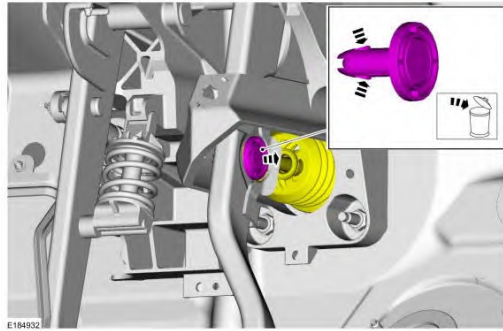


 **NOTE:** Do not pry on the brake booster or damage to the brake booster may occur.

10.

Have an assistant pull the brake booster and master cylinder assembly away from the dash panel. Remove the 4 bolts, 4 nuts and remove the brake pedal/clutch pedal assembly.

Torque

: 17 lb.ft (23 Nm)

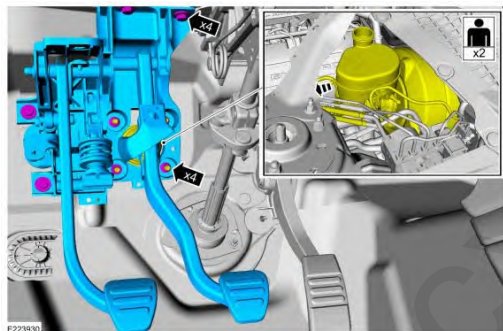

REMOVAL AND INSTALLATION > BRAKE PEDAL AND BRACKET - 6-SPEED MANUAL TRANSMISSION - 3160 6-SPEED MANUAL TRANSMISSION - MT82 > INSTALLATION

 **NOTE:** Do not press, pull or otherwise move the brake pedal while installing the stoplamp switch. The switch must be installed with the booster push rod attached to the brake pedal and with the brake pedal in the at-rest position. Installing the switch with the brake pedal in any other position will result in incorrect adjustment and may damage the switch.

1.

To install, reverse the removal procedure.

2.

Bleed the clutch. Refer to: Clutch System Bleeding .