


Tighten the coolant pump pulley bolts.

Torque

: 18 lb.ft (24 Nm)

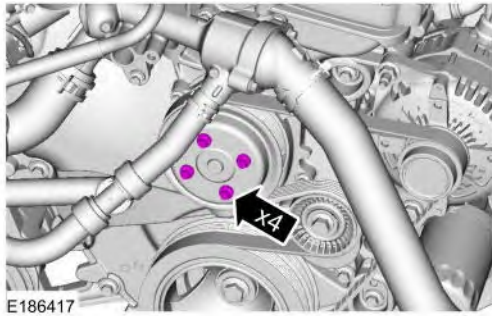

8.

Install the air cleaner outlet pipe. Refer to: AIR CLEANER OUTLET PIPE .

9.

Fill and bleed the cooling system. Refer to: Cooling System Draining and Vacuum Filling .

REMOVAL AND INSTALLATION > COOLING FAN MOTOR AND SHROUD > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.

Remove the air cleaner. Refer to: AIR CLEANER - 3.7L Duratec (227kW/301PS).

2.


Remove the air cleaner outlet pipe. Refer to: AIR CLEANER OUTLET PIPE .

3.

Remove the bolts and position the degas bottle aside.


Torque

: 80 lb.in (9 Nm)

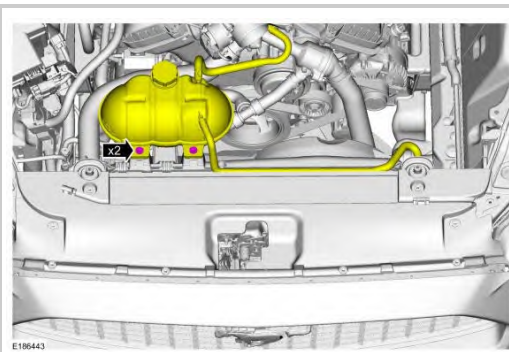

4.

Disconnect the cooling fan electrical connectors and detach the wiring harness retainers.

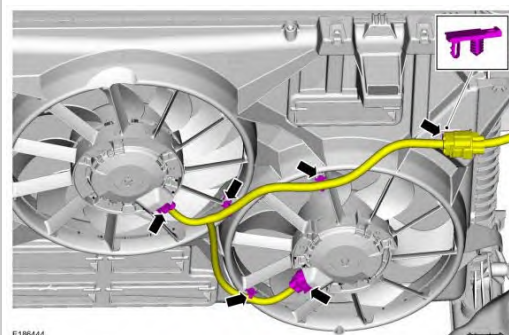


5.

Remove the bolts.

Torque

: 53 lb.in (6 Nm)

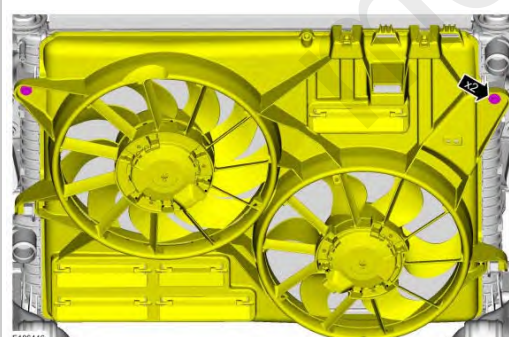

6.

Remove the cooling fan motor and shroud.