

REMOVAL AND INSTALLATION > BRAKE PEDAL AND BRACKET - 6-SPEED AUTOMATIC TRANSMISSION - 6R80 > REMOVAL



NOTE: If the fluid is spilled on the paintwork, the affected area must be immediately washed down with cold water.




NOTE: Removal steps in this procedure may contain installation details.



NOTE: Do not service the brake pedal or brake booster without first removing the stoplamp switch. The switch must be removed with the brake pedal in the at-rest position. The switch plunger must be compressed for the switch to rotate in the bracket. Attempting to remove the switch when the plunger is extended (during pedal apply) will result in damage to the switch.

1.
Remove the stoplamp switch. Refer to: Stoplamp Switch .
2.
Detach the 3 wiring harness retainers.

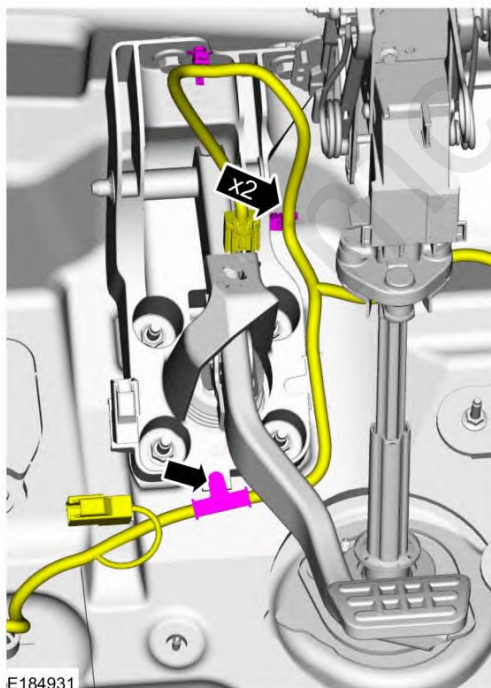

NOTE: The booster push rod clevis-locking pin is a one-time use only part. Any