


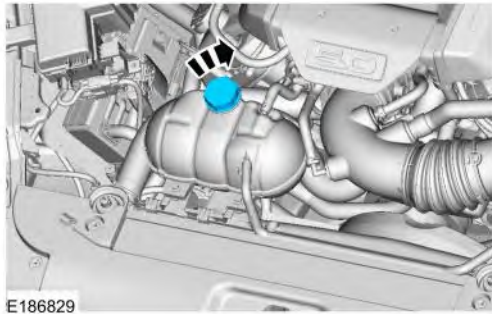

GENERAL PROCEDURES > COOLING SYSTEM FLUSHING

Materials

Name	Specification
Motorcraft® Premium Cooling System Flush VC-1	ESR-M14P7-A

Flushing

 **WARNING:** Always allow the engine to cool before opening the cooling system. Do not unscrew the coolant pressure relief cap when the engine is operating or the cooling system is hot. The cooling system is under pressure; steam and hot liquid can come out forcefully when the cap is loosened slightly. Failure to follow these instructions may result in serious personal injury.

 **NOTE:** To remove rust, sludge and other foreign material from the cooling system, use cooling system flush that is safe for use with aluminum radiators. This cleaning restores cooling system efficiency and helps prevent overheating. A pulsating or reversed direction of flushing water will loosen sediment more quickly than a steady flow in the normal coolant flow direction. In severe cases where cleaning solvents will not clean the cooling system efficiently, it will be necessary to use the pressure flushing method using cooling system flusher. Dispose of old coolant and flushing water contaminated with antifreeze and cleaning chemicals in accordance with local, state or federal laws.

1.

Add Motorcraft® Premium Cooling System Flush to the cooling system and follow the directions on the package.

Material

: Motorcraft® Premium Cooling System Flush / VC-1 (ESR-M14P7-A)

2.

Drain the cooling system. Refer to: Cooling System Draining and Vacuum Filling .