


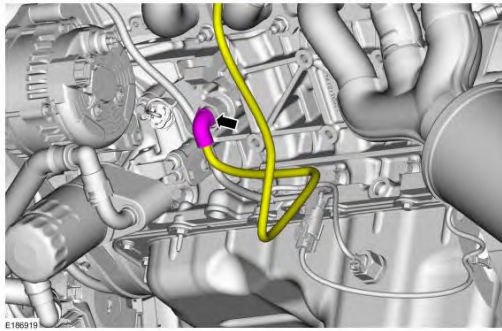


3.

Remove the block heater.

Torque

: 30 lb.ft (40 Nm)

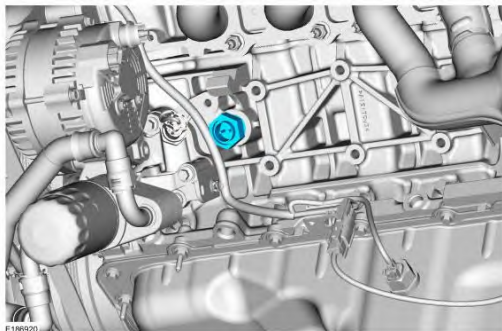

REMOVAL AND INSTALLATION > BLOCK HEATER > INSTALLATION

1.

To install, reverse the removal procedure.

2.

Fill and bleed the cooling system. Refer to: Cooling System Draining and Vacuum Filling .

REMOVAL AND INSTALLATION > COOLANT PUMP

Special Tool(s) / General Equipment

Hose Clamp Remover/Installer

Materials

Name	Specification
------	---------------