



16.

Remove Special Service Tool: 303-103 (T74P-6375-A) Holding Tool, Flywheel.



## GENERAL PROCEDURES > PISTON DIAMETER

### Check



*NOTE: Refer to the appropriate article for the specification.*

1.

Measure the piston diameter 90 degrees from the piston pin and 41 mm (1.61 in) down from the top of the piston at the point indicated.