


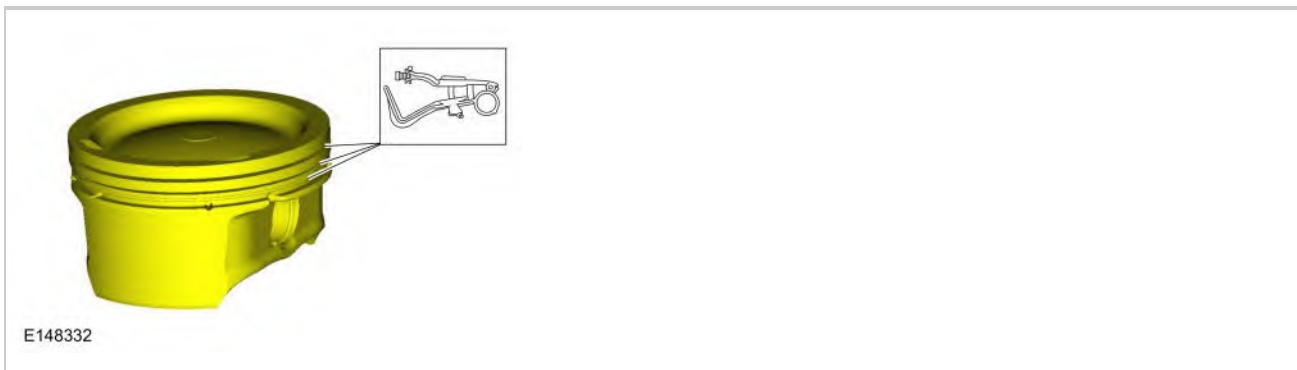

GENERAL PROCEDURES > PISTON RING END GAP

Special Tool(s) / General Equipment

Feeler Gauge

Check



NOTE: Refer to the appropriate article for the specification.



NOTE: The cylinder bore must be within specification for taper and out-of-round.



NOTE: Piston rings should not be transferred from one piston to another.



NOTE: Use care when fitting piston rings to avoid possible damage to the piston ring or the cylinder bore.

1.

Use a piston without rings to push a piston ring in a cylinder to the bottom of ring travel.



2.