



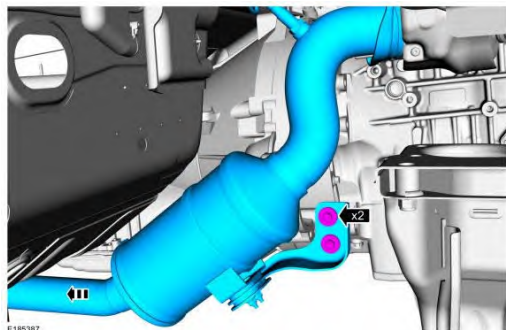

6.

Remove and discard the gasket.

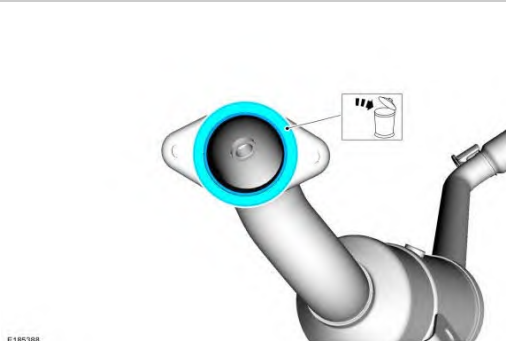

REMOVAL AND INSTALLATION > CATALYTIC CONVERTER > INSTALLATION

1.

To install, reverse the removal procedure.

2.

Check the exhaust system for leaks.

REMOVAL AND INSTALLATION > MUFFLER AND TAILPIPE

Materials

Name	Specification
Threadlock and Sealer TA-25-B	-

REMOVAL AND INSTALLATION > MUFFLER AND TAILPIPE > REMOVAL