

**Does the parking brake control handle move?**

|            |                                                                                                                                                                                        |
|------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Yes</b> | GO to A4                                                                                                                                                                               |
| <b>No</b>  | INSTALL a new parking brake control and front cable assembly as necessary. REFER to: Parking Brake Cable LH or REFER to Parking Brake Cable RH . TEST the system for normal operation. |

**A4 ISOLATE THE REAR PARKING BRAKE CABLES**

Disconnect the rear parking brake cable from the rear brake caliper at the affected wheel end(s).

While holding the cable conduit, attempt to slide the cable inside the conduit.

**Does the cable slide freely inside the conduit?**

|            |                                                                                                                                                                                                                                                             |
|------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Yes</b> | The parking brake system is operating normally at this time. INSPECT the rear brake components on the affected wheel end(s). INSTALL new rear brake components as necessary and ADJUST the parking brake cables. REFER to: Parking Brake Cable Adjustment . |
| <b>No</b>  | INSTALL new RH or LH rear parking brake cables as necessary. REFER to: Parking Brake Cable LH (206-05 Parking Brake and Actuation, Removal and Installation). REFER to: Parking Brake Cable RH .                                                            |

**DIAGNOSIS AND TESTING > PARKING BRAKE > PINPOINT TESTS > PINPOINT TEST B : PARKING BRAKE WILL NOT RELEASE****Normal Operation and Fault Conditions**

When the parking brake release button is pressed and the brake control is released, the tension on the parking brake cables return the system to the released position.

**Possible Sources**

- Parking brake cable(s)
- Parking brake control
- Rear brake caliper(s)
- Parking brake cable equalizer

**DIAGNOSIS AND TESTING > PARKING BRAKE > PINPOINT TESTS > PINPOINT TEST B : PARKING BRAKE WILL NOT RELEASE > PINPOINT TEST B : PARKING BRAKE WILL NOT RELEASE**