



REMOVAL AND INSTALLATION > CATALYTIC CONVERTER RH > INSTALLATION

1.

To install, reverse the removal procedure.

2.

Check the exhaust system for leaks.

REMOVAL AND INSTALLATION > MUFFLER AND TAILPIPE

Materials

Name	Specification
Threadlock and Sealer TA-25-B	-

REMOVAL AND INSTALLATION > MUFFLER AND TAILPIPE > REMOVAL



NOTE: Do not excessively bend, twist or allow the exhaust to hang from the flexible joint or damage to the exhaust system may occur.



NOTE: Do not use oil or grease-based lubricants on the isolators. They may cause deterioration of the rubber.



NOTE: Removal steps in this procedure may contain installation details.



NOTE: Clean all exhaust connections before reassembly.