



NOTE: Removal steps in this procedure may contain installation details.

1.


Remove the Fuel Pump and Sender Unit. Refer to: Fuel Pump and Sender Unit .

2.

Disconnect the electrical connector.

Release the locking tab.

Remove the fuel level sender.

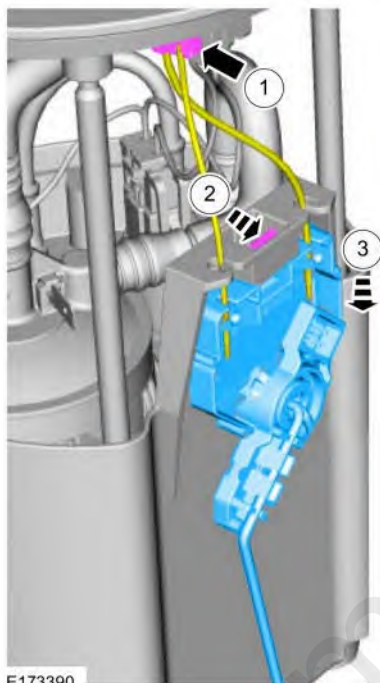

E173390

REMOVAL AND INSTALLATION > FUEL LEVEL SENDER > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > FUEL LEVEL SENSOR

Fuel Level Sensor

Special Tool(s) / General Equipment