


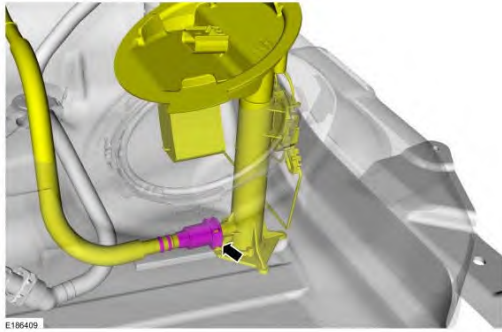

REMOVAL AND INSTALLATION > FUEL LEVEL SENSOR > INSTALLATION

 **NOTE:** Make sure the alignment tabs on the Fuel Level Sensor and the fuel tank meet prior to tightening the Fuel Level Sensor lock ring.

 **NOTE:** Make sure to install a new Fuel Level Sensor O-ring seal.

1.
To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > FUEL LINES > REMOVAL

1.
Remove the fuel tank. Refer to: Fuel Tank .
2.
Remove the nuts and the engine appearance cover.
Torque
: 80 lb.in (9 Nm)