

REMOVAL AND INSTALLATION > FUEL LINES > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > FUEL PUMP AND SENDER UNIT

Special Tool(s) / General Equipment

	292-00004 Fuel Tanker 100 GPM
	310-123 Locking Ring, Fuel Tank TKIT-2004J-F TKIT-2005U-LM

REMOVAL AND INSTALLATION > FUEL PUMP AND SENDER UNIT > REMOVAL

1.

Release the fuel system pressure. Refer to: FUEL SYSTEM PRESSURE RELEASE - 2.3L EcoBoost (231kW/314PS).

2.

Disconnect the battery ground cable. Refer to: Battery Disconnect and Connect .

 *NOTE: The supplemental refueling adapter is located in the luggage compartment.*

3.

Install the supplemental refueling adapter and a 6 ft. length of 5/8 in. semi-rigid fuel drain tube into the Easy Fuel™ (capless) fuel tank filler pipe until the tube enters the fuel tank.