



NOTE: Make sure to install a new Fuel Pump and Sender Unit O-ring seal.

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > FUEL TANK

Special Tool(s) / General Equipment

 E80148	310-123 Locking Ring, Fuel Tank TKIT-2004J-F TKIT-2005U-LM
Flat Headed Screw Driver	

Materials

Name	Specification
Threadlock and Sealer TA-25-B	-

REMOVAL AND INSTALLATION > FUEL TANK > REMOVAL



NOTE: Removal steps in this procedure may contain installation steps.

1.

With the vehicle in NEUTRAL, position it on a hoist. Refer to: Jacking and Lifting - Overview .

2.

Disconnect the battery ground cable. Refer to: Battery Disconnect and Connect .

3.

Drain the fuel tank. Refer to: FUEL TANK DRAINING - 2.3L EcoBoost (231kW/314PS).

4.

Remove the muffler and tailpipe. Refer to: MUFFLER AND TAILPIPE - 2.3L EcoBoost (231kW/314PS).

5.