


Remove the Fuel Level Sender.

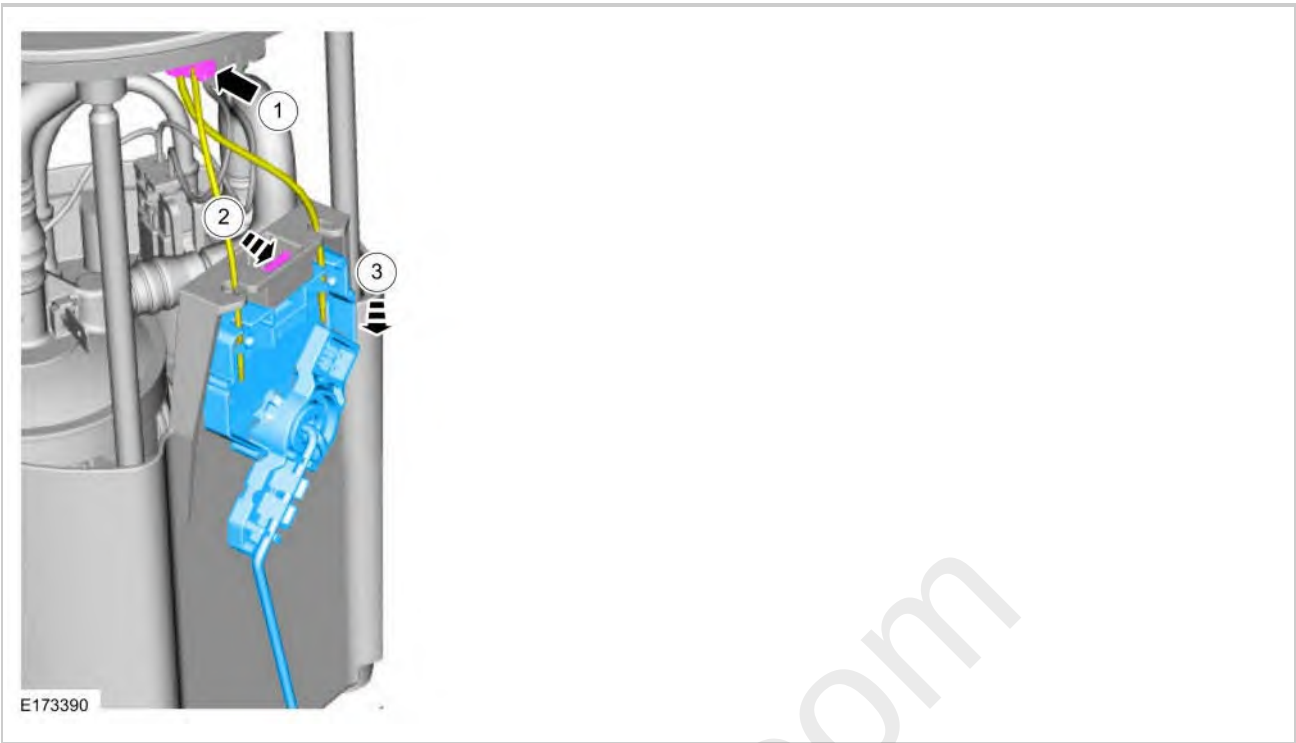

REMOVAL AND INSTALLATION > FUEL LEVEL SENDER > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > FUEL LEVEL SENSOR

Special Tool(s) / General Equipment

 ST1134A	292-00004 Fuel Tanker 100 GPM
 310-123 E80148	310-123 Locking Ring, Fuel Tank TKIT-2004J-F TKIT-2005U-LM