



NOTE: Make sure to install a new Fuel Level Sensor O-ring seal.



NOTE: Make sure the alignment tabs on the Fuel Level Sensor and the fuel tank meet prior to tightening the Fuel Level Sensor lock ring.


1.

To install, reverse the removal procedure.


REMOVAL AND INSTALLATION > FUEL LINES > REMOVAL

1. Remove the fuel tank. Refer to: Fuel Tank .
2. Remove LH Catalytic Converter. Refer to: CATALYTIC CONVERTER LH .
3. Remove the nuts and the heat shield.

Torque: 71 lb.in (8 Nm)

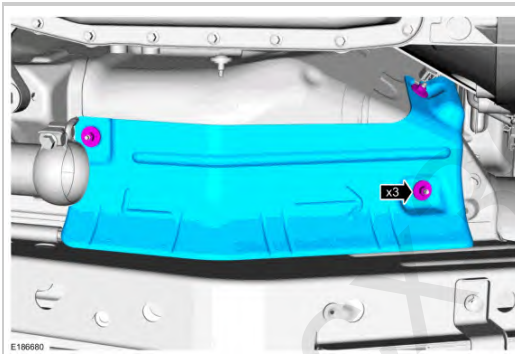

4. Release the fuel line from the retainers.

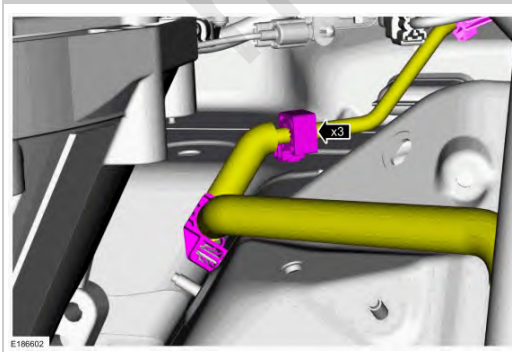

5. Disconnect the fuel line-to-fuel rail jumper tube spring lock coupling. Refer to: SPRING LOCK COUPLINGS .