


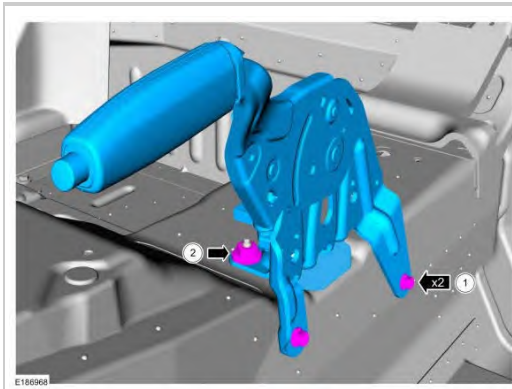

REMOVAL AND INSTALLATION > PARKING BRAKE CONTROL > INSTALLATION

1.

To install, reverse the removal procedure.

2.

Adjust the parking brake cables. Refer to: Parking Brake Cable Adjustment . Refer to: Parking Brake Cable Adjustment - Vehicles With: SVT Performance Package .

REMOVAL AND INSTALLATION > PARKING BRAKE CABLE LH > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.

Remove the muffler and tailpipe assembly. Refer to: MUFFLER AND TAILPIPE - 2.3L EcoBoost (231kW/314PS). Refer to: MUFFLER AND TAILPIPE - 3.7L Duratec (227kW/301PS). Refer to: MUFFLER AND TAILPIPE - 5.0L 32V Ti-VCT/5.0L Ti-VCT V8 (308kW/418PS).

2.

1.


Loosen the parking brake cable adjustment nut.

2.

Push inward on the 2 tabs and detach the LH cable from the bracket.

3.

Rotate the cable, slide the pin upwards and detach the cable from the equalizer.

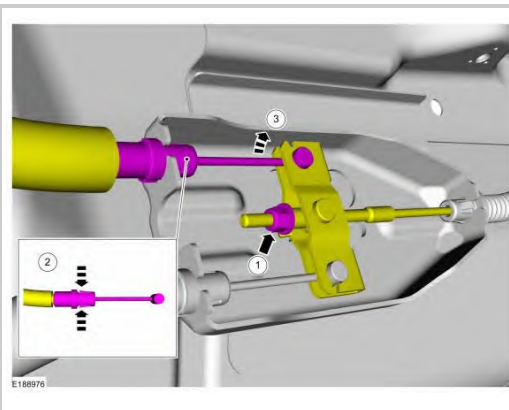

3.

1.

Remove the parking brake cable bracket nut.

Torque


: 18 lb.ft (25 Nm)

2.

Remove the parking brake cable bracket bolt.

Torque

: 18 lb.ft (25 Nm)

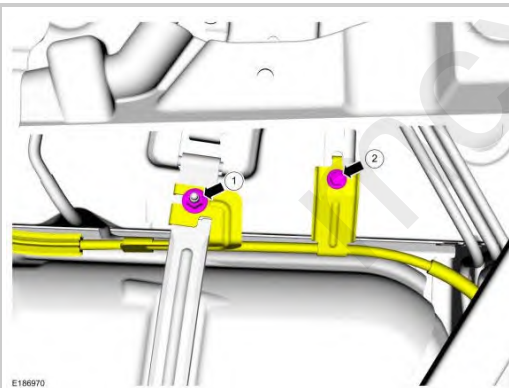

4.

Remove the 2 parking brake cable bracket bolts.

Torque:

1.: 18 lb.ft (25 Nm)

2.: 20 lb.ft (27.5 Nm)