



NOTE: Make sure the alignment tabs on the Fuel Pump and Sender Unit and the fuel tank meet prior to tightening the Fuel Pump and Sender Unit lock ring.

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > FUEL TANK

Special Tool(s) / General Equipment

 310-123 E80148	310-123 Locking Ring, Fuel Tank TKIT-2004J-F TKIT-2005U-LM
Flat Headed Screw Driver	

Materials

Name	Specification
Threadlock and Sealer TA-25-B	-

REMOVAL AND INSTALLATION > FUEL TANK > REMOVAL



NOTE: Removal steps in this procedure may contain installation steps.

1. With the vehicle in NEUTRAL, position it on a hoist. Refer to: Jacking and Lifting - Overview .
2. Disconnect the battery ground cable. Refer to: Battery Disconnect and Connect .
3. Drain the fuel tank. Refer to: FUEL TANK DRAINING .
4. Remove the muffler and tailpipe. Refer to: MUFFLER AND TAILPIPE - 5.0L 32V Ti-VCT/5.0L Ti-VCT V8 (308kW/418PS).
5.
 1. Index mark the driveshaft and pinion flange for reference during installation.
 2. Remove the driveshaft to pinion flange bolts.