

1.

1.

Loosen the clamp, position aside the air outlet pipe.

Torque

: 48 lb.in (5.4 Nm)

2.

Detach the wiring harness retainers and disconnect the IAT sensor electrical connectors.

3.


Remove the bolt.

Torque

: 71 lb.in (8 Nm)

4.

Remove the air cleaner assembly.

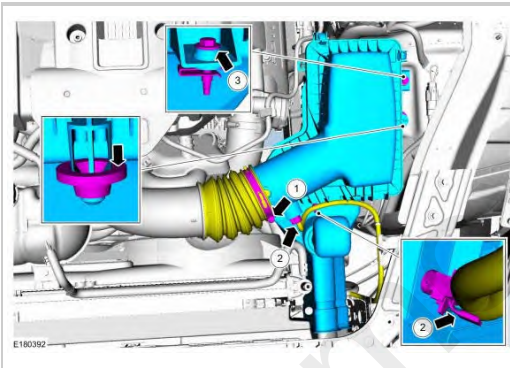

REMOVAL AND INSTALLATION > AIR CLEANER > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > AIR CLEANER OUTLET PIPE > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.