

REMOVAL AND INSTALLATION > CHARGE AIR COOLER (CAC) INTAKE PIPE > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > CHARGE AIR COOLER (CAC) OUTLET PIPE > REMOVAL

 **NOTE:** When removing any turbocharger air intake system components, make sure to cover any open ports to prevent debris from entering the system. The turbocharger compressor vanes can be damaged by even the smallest particles. All components need to be inspected and cleaned prior to installation or reassembly.

 **NOTE:** Removal steps in the procedure may contain installation details.

1.


With the vehicle in NEUTRAL, position it on a hoist. Refer to: Jacking and Lifting - Overview .

2.

Loosen the clamp and disconnect the outlet pipe.

Torque

: 44 lb.in (5 Nm)

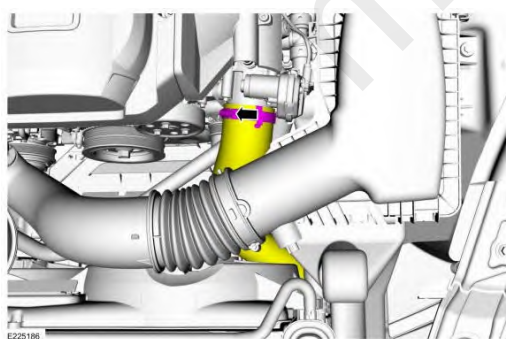

 **NOTE:** If equipped.

3.

Remove the underbody shield.