


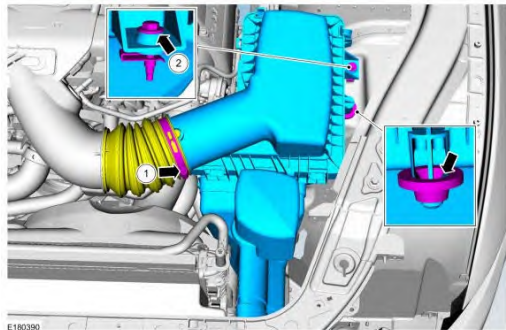

REMOVAL AND INSTALLATION > AIR CLEANER > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > AIR CLEANER OUTLET PIPE > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.


1.

Disconnect and position aside the brake booster tube & the crankcase ventilation tube.

2.

Loosen the 2 clamps and remove the air cleaner outlet pipe.

Torque: 48 lb.in (5.4 Nm)

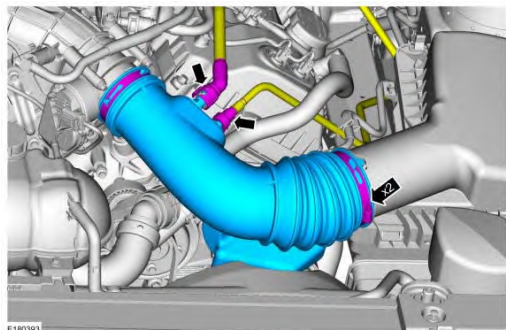

REMOVAL AND INSTALLATION > AIR CLEANER OUTLET PIPE > INSTALLATION