


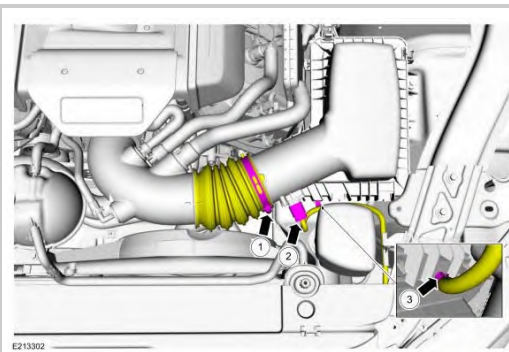

2.

1.


Detach and position the sound symposer from the air cleaner.

2.

Remove the bolt and the air cleaner.

Torque

: 71 lb.in (8 Nm)

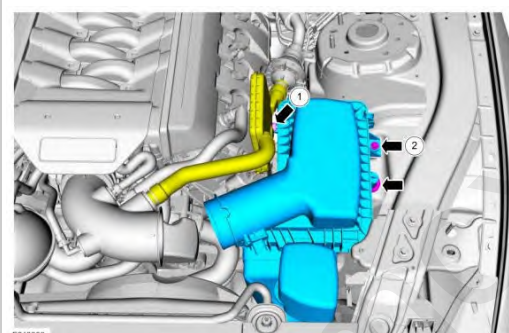

REMOVAL AND INSTALLATION > AIR CLEANER > INSTALLATION

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > AIR CLEANER OUTLET PIPE > REMOVAL



NOTE: Removal steps in this procedure may contain installation details.

1.