


: 35 lb.ft (47.5 Nm)

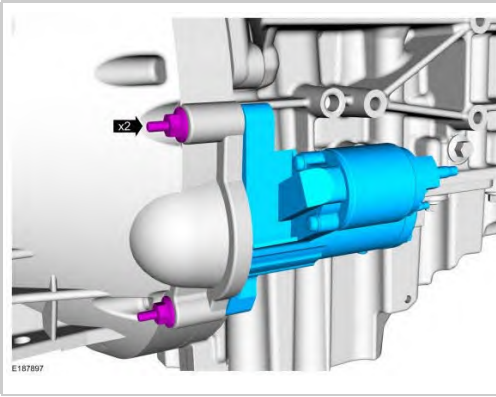

7.

Inspect the starter motor drive gear and flywheel ring gear. Refer to: Starter Motor Drive Gear and Flywheel Ring Gear Inspection .

REMOVAL AND INSTALLATION > STARTER MOTOR > INSTALLATION

1.

To install, reverse the removal procedure.