

REMOVAL AND INSTALLATION > CAMSHAFT POSITION (CMP) SENSOR > INSTALLATION



NOTE: Before installation, lubricate the CMP sensor O-ring seal with clean engine oil.

1.

To install, reverse the removal procedure.

REMOVAL AND INSTALLATION > CATALYST MONITOR SENSOR

Special Tool(s) / General Equipment

 E172696	303-476 (T94P-9472-A) Socket, Exhaust Gas Oxygen Sensor TKIT-1994-F TKIT-1994-FLM/FM TKIT-1994-LM/M
--	--

Materials

Name	Specification
High Temperature Nickel Anti-Seize Lubricant XL-2	-
Penetrating and Lock Lubricant XL-1	-

REMOVAL AND INSTALLATION > CATALYST MONITOR SENSOR > REMOVAL

All sensors

1.

With the vehicle in NEUTRAL, position it on a hoist. Refer to: Jacking and Lifting - Overview .

Right hand (RH) Catalyst monitor sensor

2.

1.

Disconnect the catalyst monitor sensor electrical connector.

2.